



REVISIONS				SYN	DESCRIPTION	PREPARED BY	DATE	APPROVED

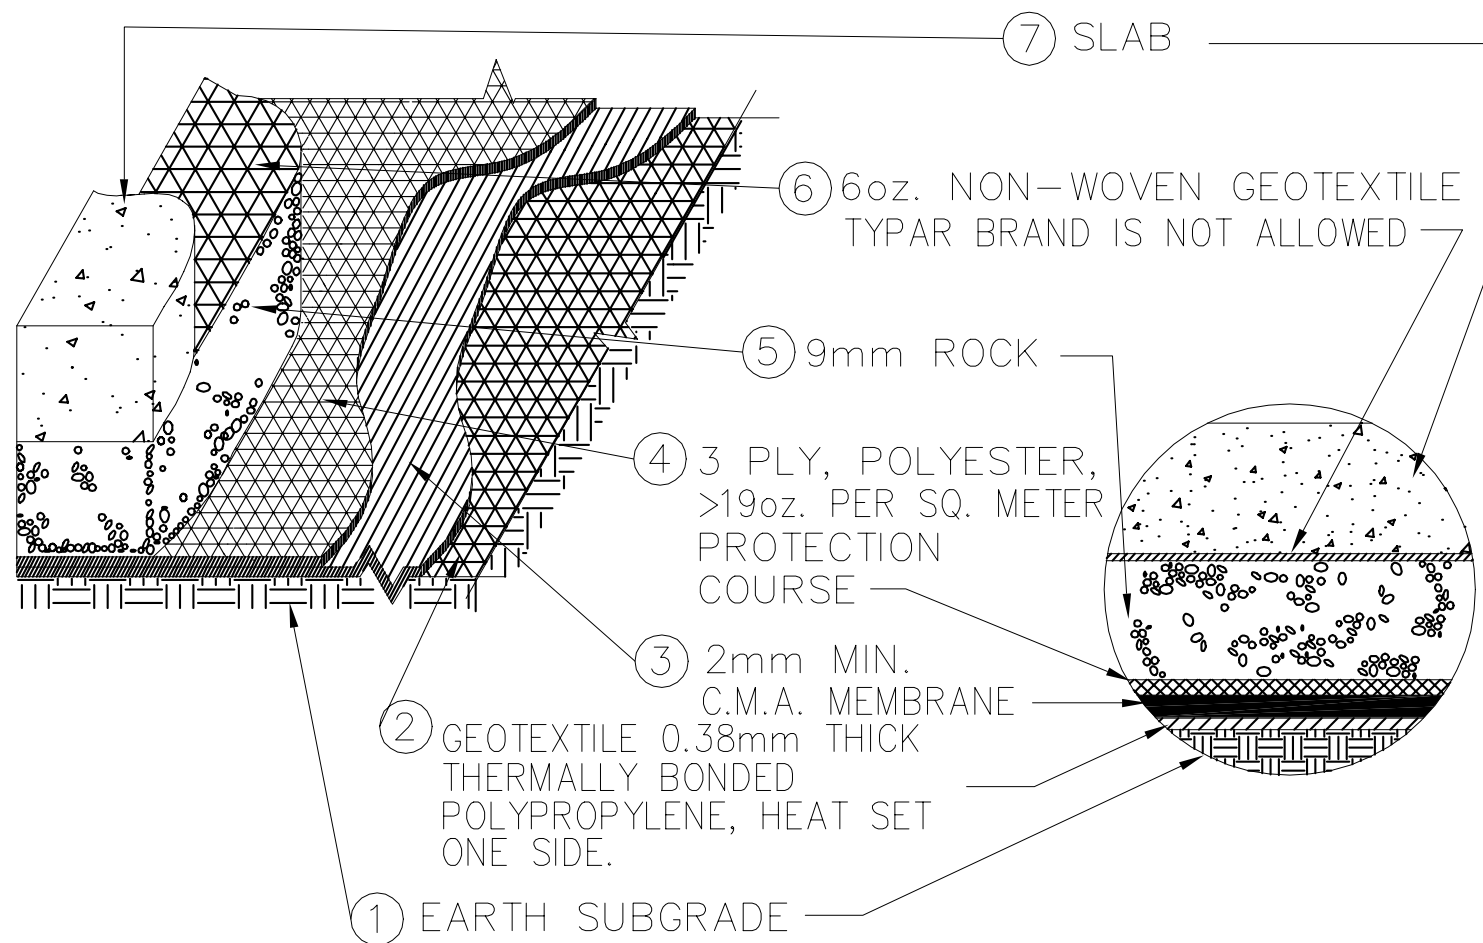


MEDICAL/DENTAL CLINIC  
HORIZONTAL MEMBRANE  
NOT TO SCALE

26  
GC-4 GC-6

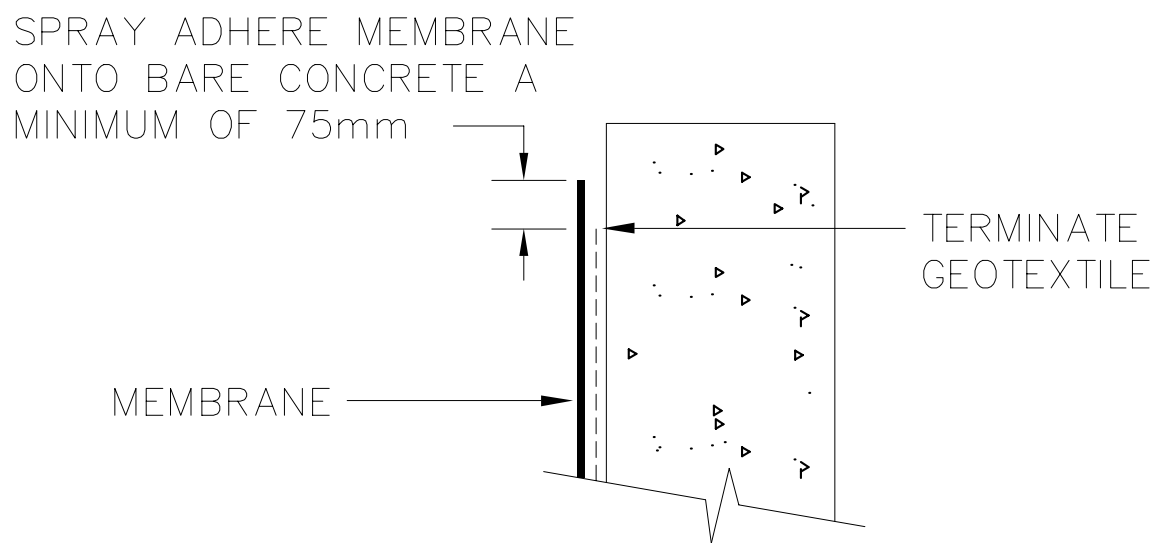

MEDICAL/DENTAL CLINIC  
MEMBRANE BOND TO CONC.  
NOT TO SCALE



30  
GC-6 GC-6

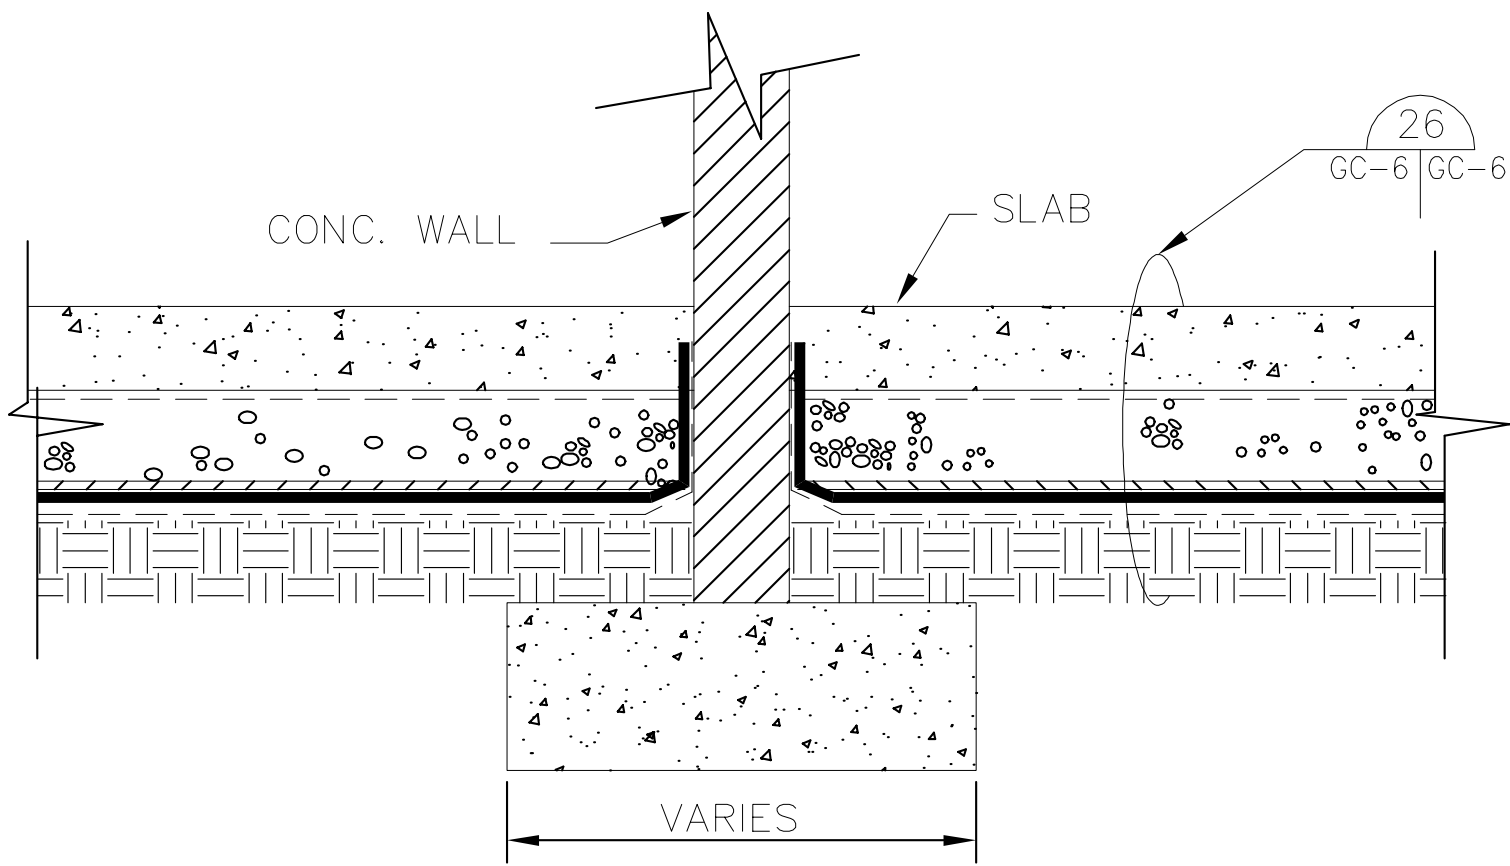

MEDICAL/DENTAL CLINIC  
MEMBRANE @ INTERIOR FOOTING  
NOT TO SCALE


34  
GC-6 GC-6

DOUBLE MEMBRANE  
AT BOTTOM OF ELEVATOR

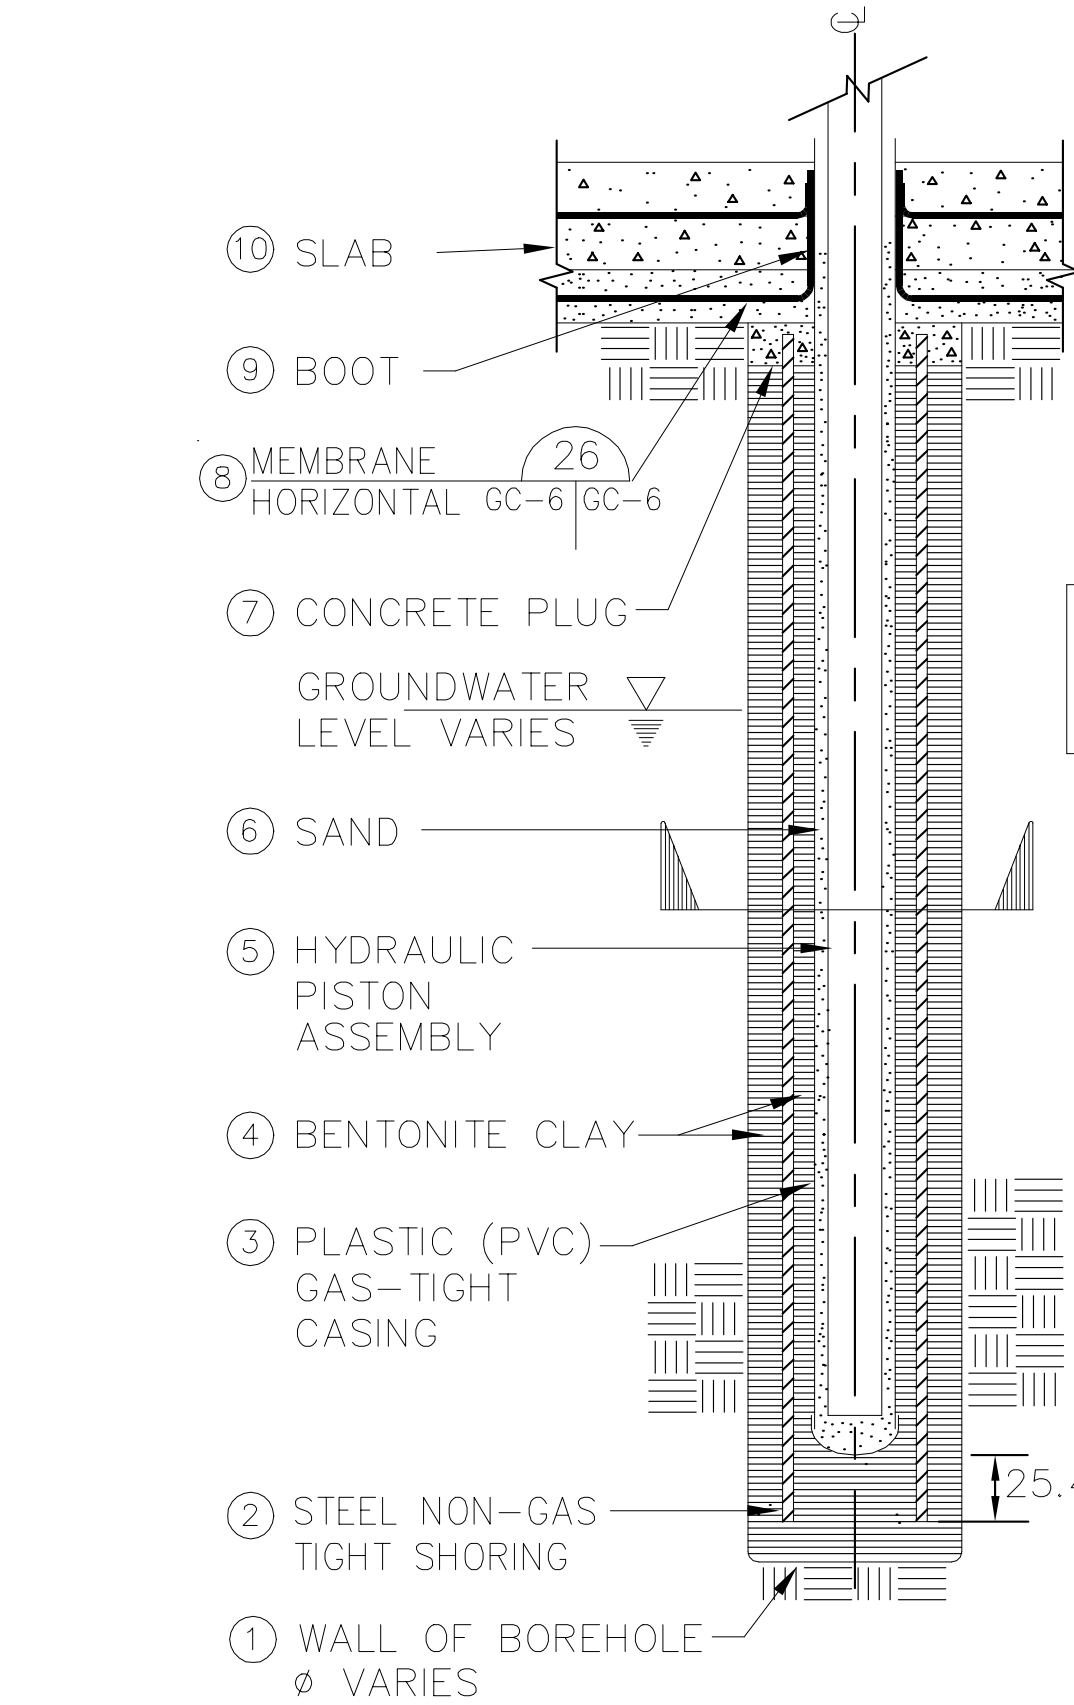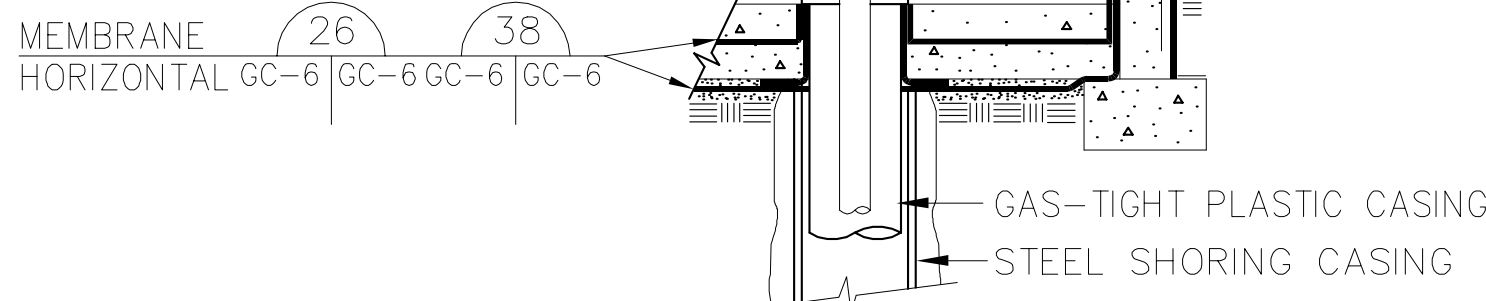


- NOTES:
1. CONTRACTOR SHALL NOTIFY CONTRACTING OFFICER OR HIS REP. 72-HOURS PRIOR TO DRILLING FOR PISTON.
  2. CONTRACTOR SHALL MONITOR FOR COMBUSTIBLE GASSES DURING DRILLING FOR PISTON

MEMBRANE SHALL BE BOOTED TO INNER GAS-TIGHT CASING, NOT TO STEEL SHORING CASING.

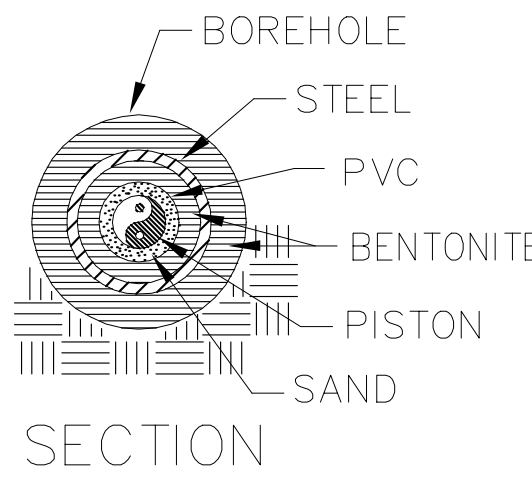


MEDICAL/DENTAL CLINIC  
MEMBRANE @ ELEVATOR  
NOT TO SCALE

37  
GC-4 GC-6

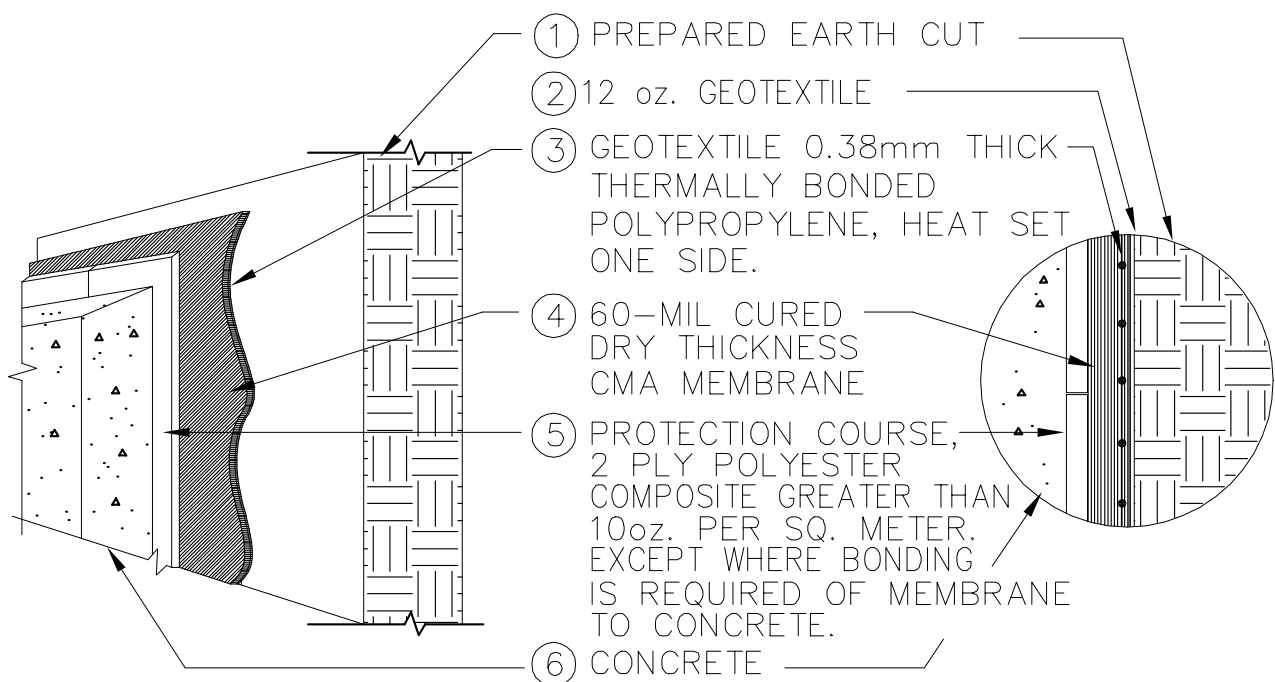

MEDICAL/DENTAL CLINIC  
VERTICAL MEMBRANE  
NOT TO SCALE


27  
GC-6 GC-6

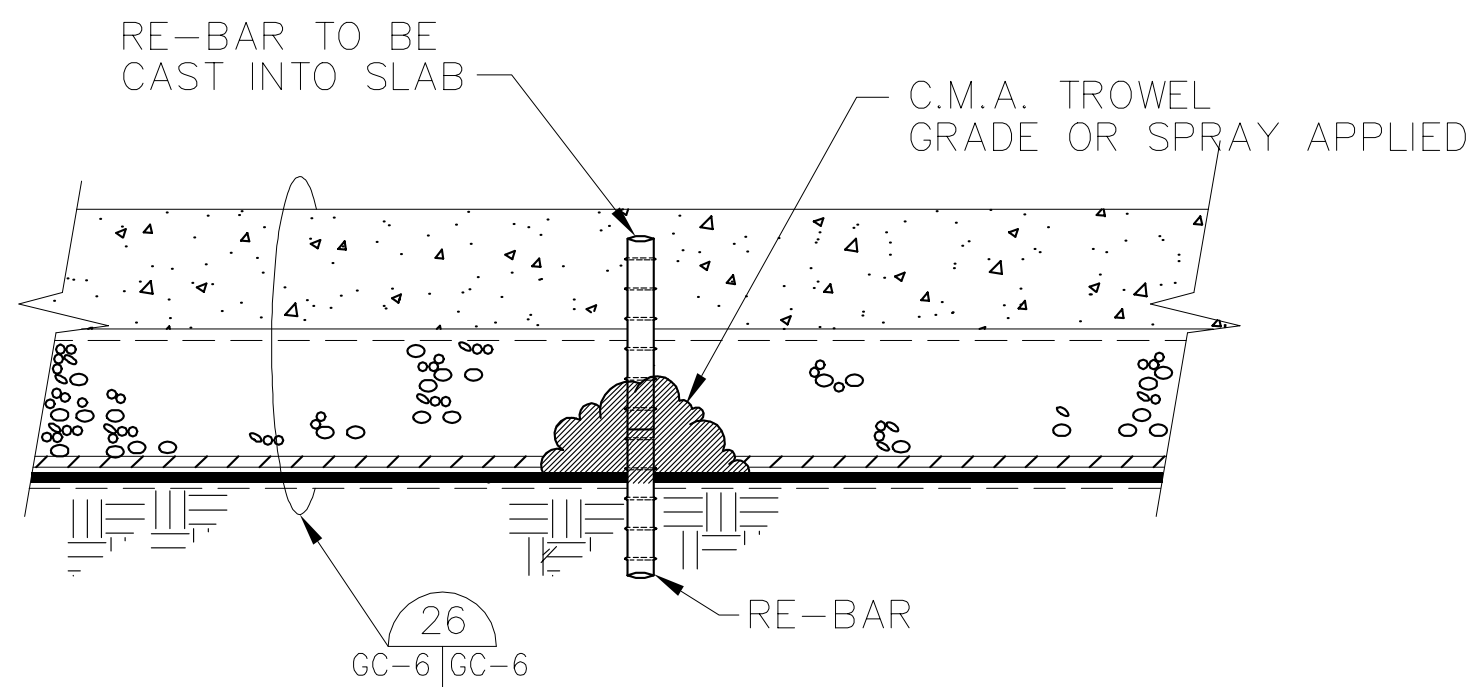

THIS DETAIL IS DEVELOPED TO SATISFY FIELD CONDITIONS AT BULKHEAD STAKES.


MEDICAL/DENTAL CLINIC  
RE-BAR PENETRATION REPAIR  
NOT TO SCALE

31  
GC-6 GC-6

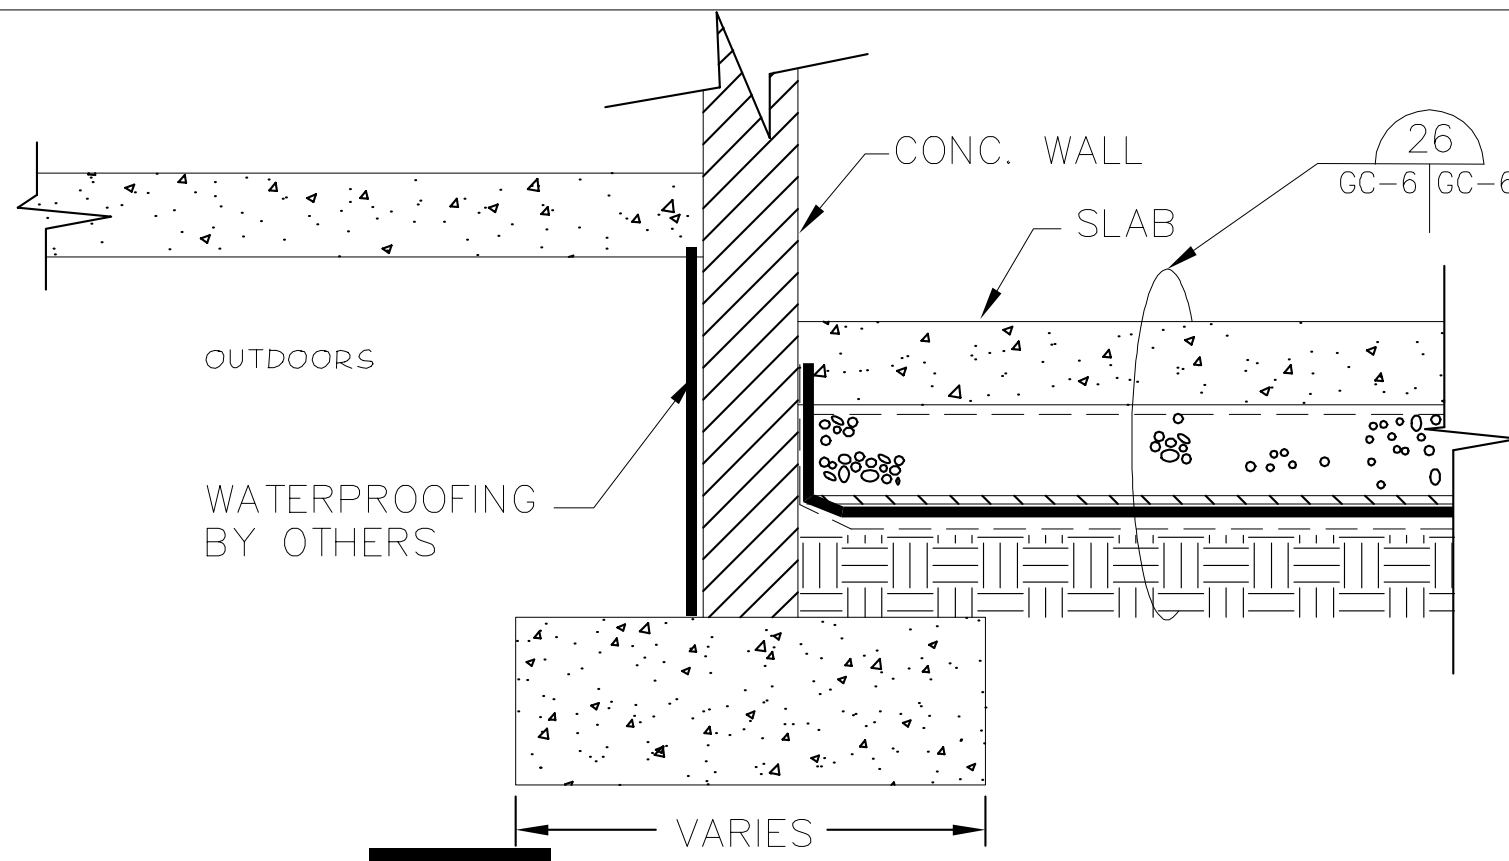

MEDICAL/DENTAL CLINIC  
MEMBRANE @ SHEAR FOOTING  
NOT TO SCALE


35.1  
GC-6 GC-6

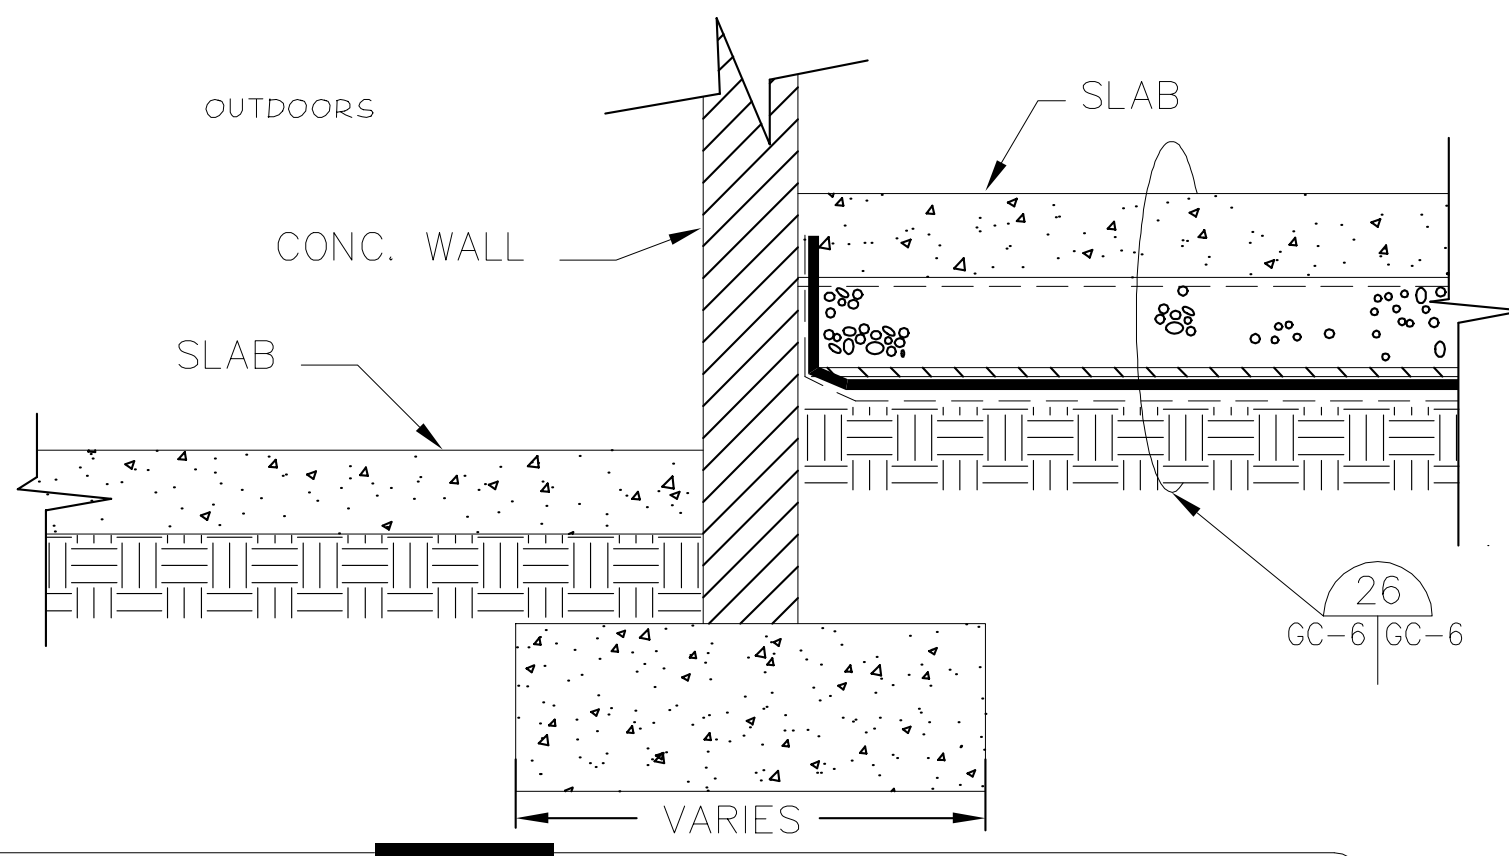

MEDICAL/DENTAL CLINIC  
ALT. MEMBRANE @ SHEAR FTG.  
NOT TO SCALE

35.2  
GC-6 GC-6

ALL MEMBRANE FIELD JOINTS SHALL BE OVERLAPPED A MINIMUM OF 152mm

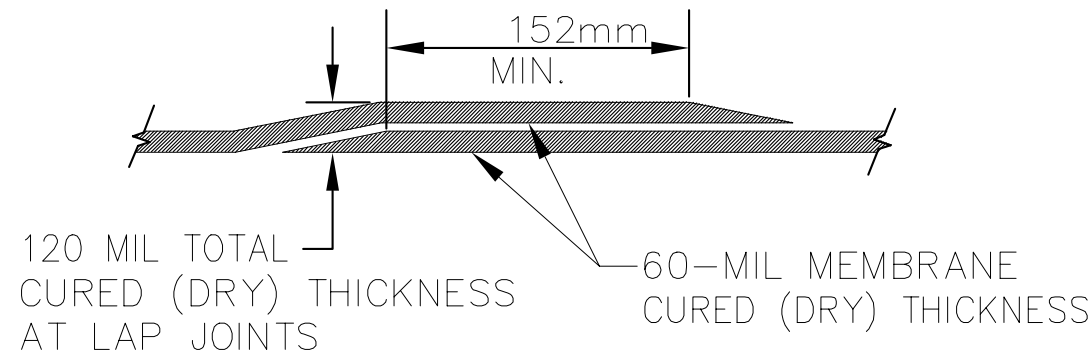

NOTE:  
ALL MEMBRANE SHALL BE CLEANED WITH SOFT BRUSH AND WATER PRIOR TO SPRAYING LAP JOINTS.


MEDICAL/DENTAL CLINIC  
MEMBRANE LAP  
NOT TO SCALE

28  
GC-6 GC-6


FIELD SITUATIONS NOT SPECIALLY DETAILED SHALL BE HANDLED PER THE INTENT OF THESE PLANS AND SPECIFICATIONS WITH THE APPROVAL OF THE METHANE ENGR. CONTRACTOR MAY SUBMIT SHOP DRAWINGS FOR ALTERNATIVE METHODS, WHICH MAY BE APPROVED AT NO ADDITIONAL COST TO THE OWNER.

MEDICAL/DENTAL CLINIC  
NOTES  
NOT TO SCALE

32  
GC-6 GC-6

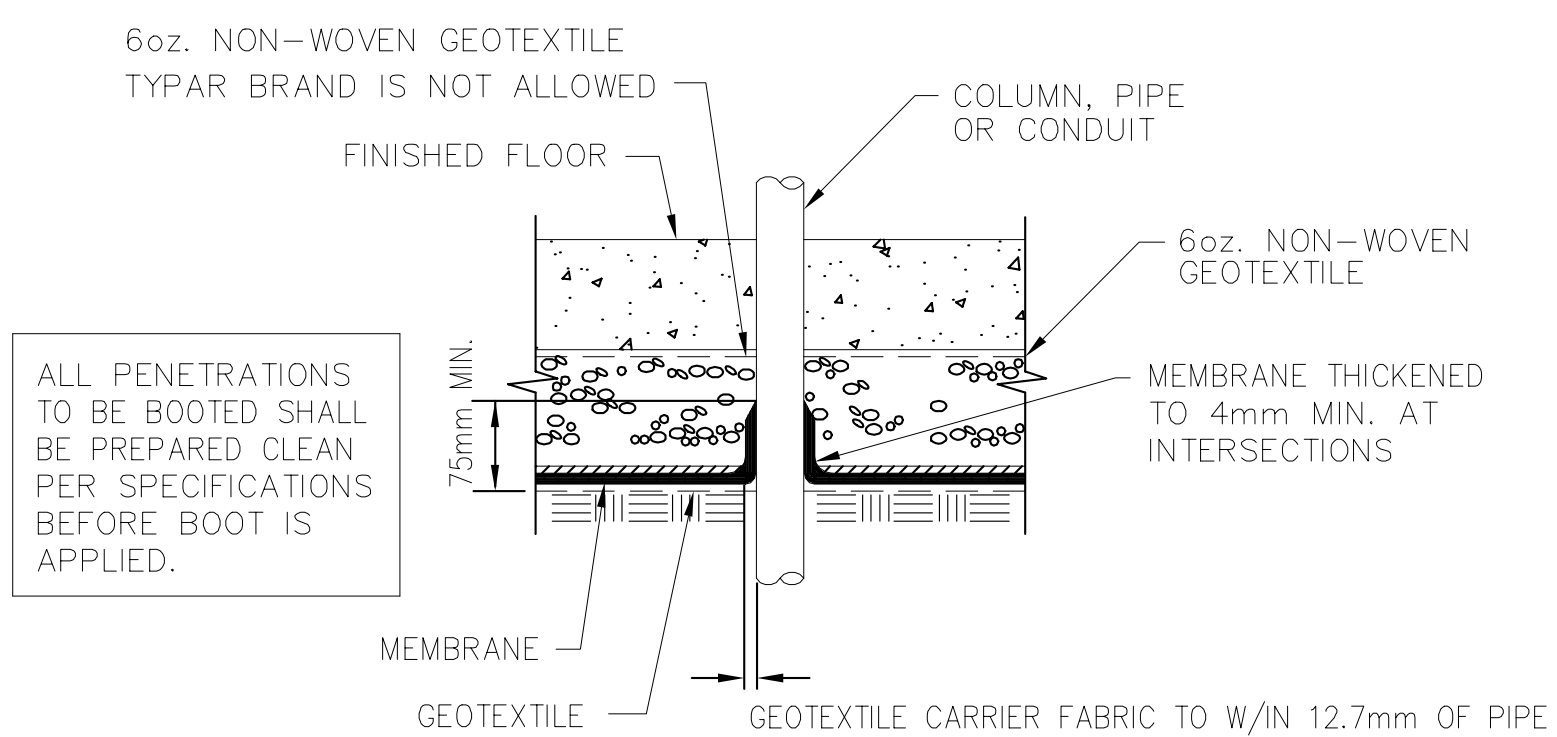


ALL PENETRATIONS TO BE BOOTED SHALL BE PREPARED CLEAN PER SPECIFICATIONS BEFORE BOOT IS APPLIED.

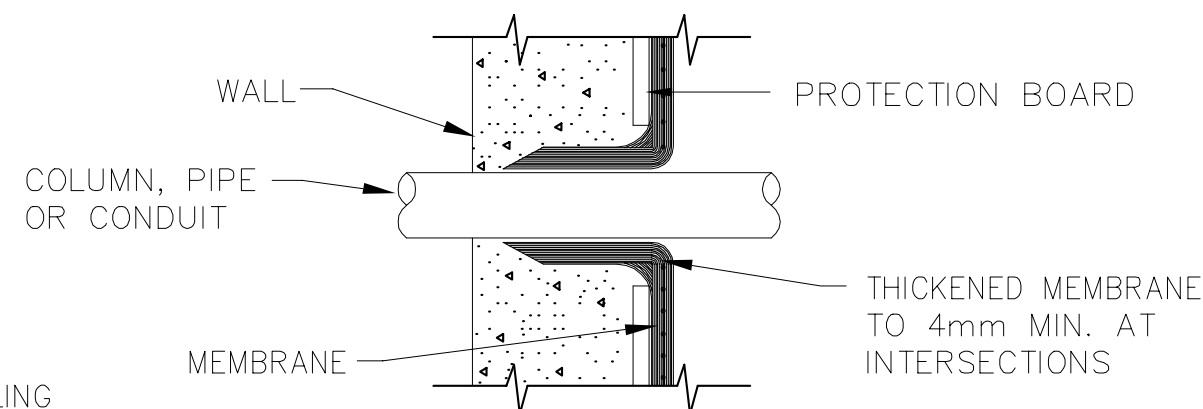

NO COUPLING IN PLANE OF MEMBRANE


MEDICAL/DENTAL CLINIC  
MEMBRANE BOOT  
NOT TO SCALE

29  
GC-4 GC-6

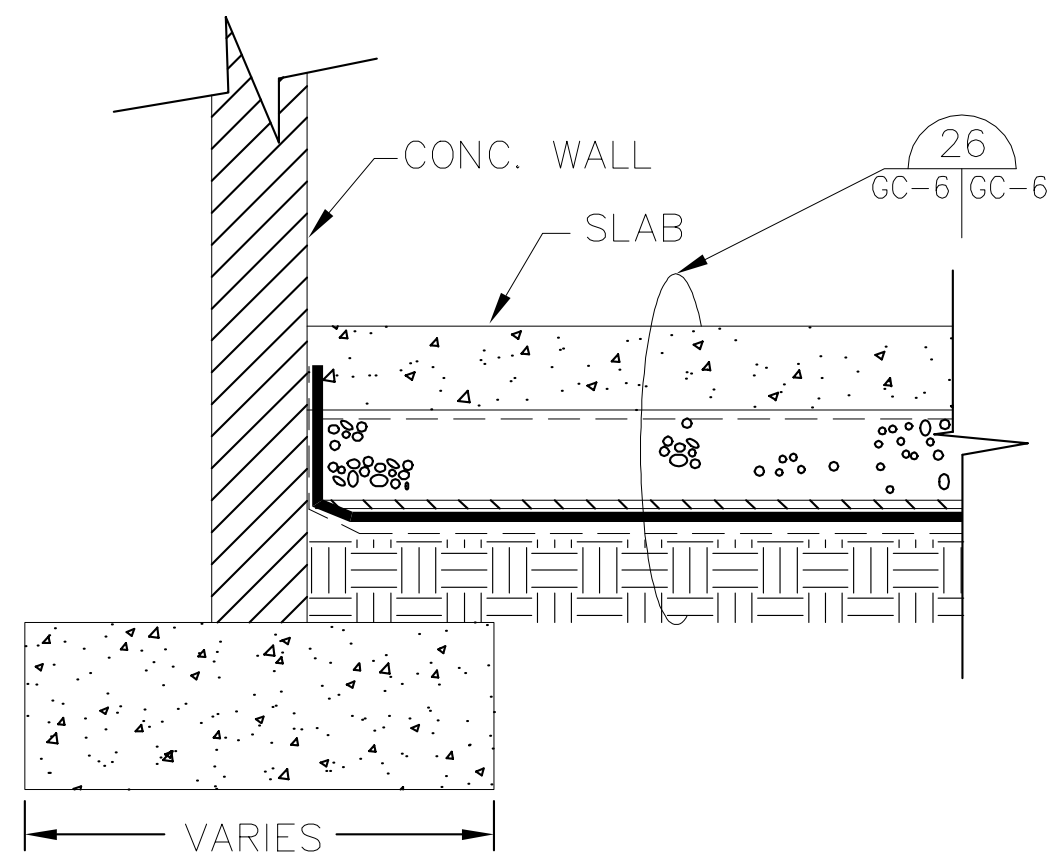

MEDICAL/DENTAL CLINIC  
MEMBRANE @ EXTERIOR FOOTING  
NOT TO SCALE

33  
GC-4 GC-6

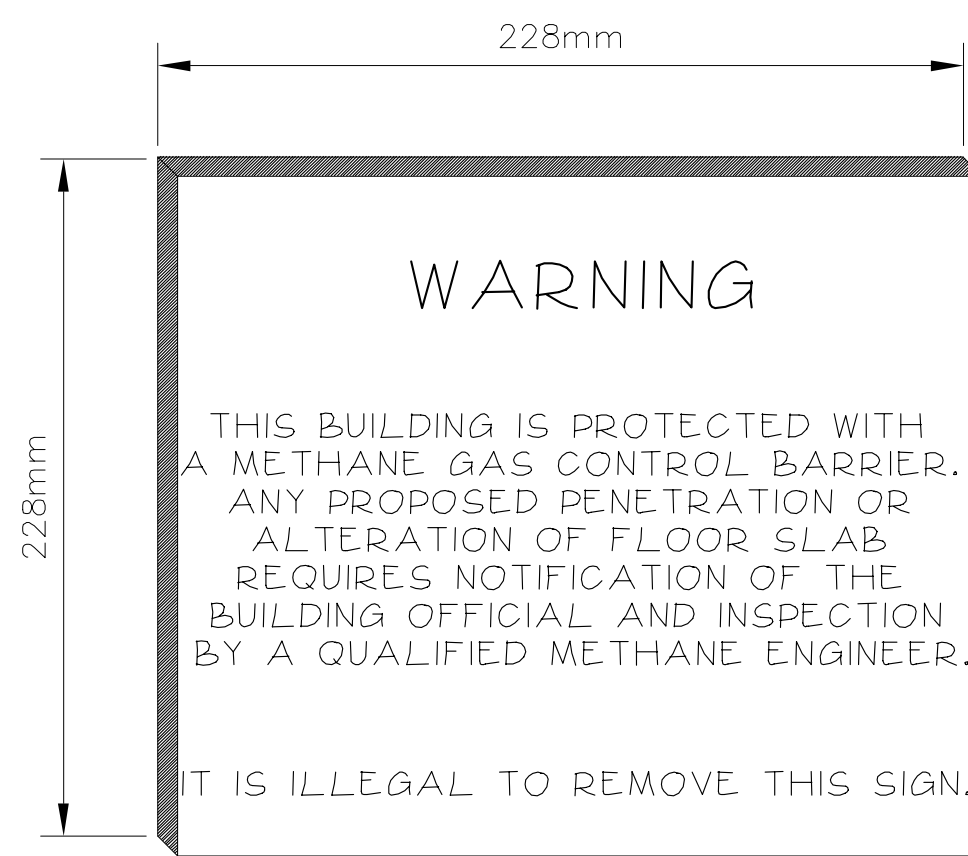

TWO REQUIRED

LOCATE PER CONTRACTING OFFICER

MEDICAL/DENTAL CLINIC  
SIGN  
NOT TO SCALE

36  
GC-6 GC-6

CONTRACTOR SHALL PROVIDE MIN. 914mm x 914mm BOX-OUT FOR AUGERING ELEVATOR PISTON. NEATLY CUT MEMBRANE LEAVING MIN. 75mm ALL AROUND BOX-OUT. AUGER MAX. 457mm DIA. REPAIR AND BOOT MEMBRANE AS SHOWN IN -

MEMBRANE @ ELEV.  
GC-6 GC-6

MEDICAL/DENTAL CLINIC  
NOTES  
NOT TO SCALE

38  
GC-6 GC-6

IF SHEET IS LESS THAN 28"x42", IT IS A REDUCED PRINT. SCALE REDUCED ACCORDINGLY.

GC-6

MEDICAL/DENTAL CLINIC

SUBSLAB MEMBRANE DETAILS

SIZE	CODE IDENT. NO.	DRAWING NO.
F	XXXXX	8144530
SCALE:	CONST. CONTR. NO.	SHEET 25 OF 316